

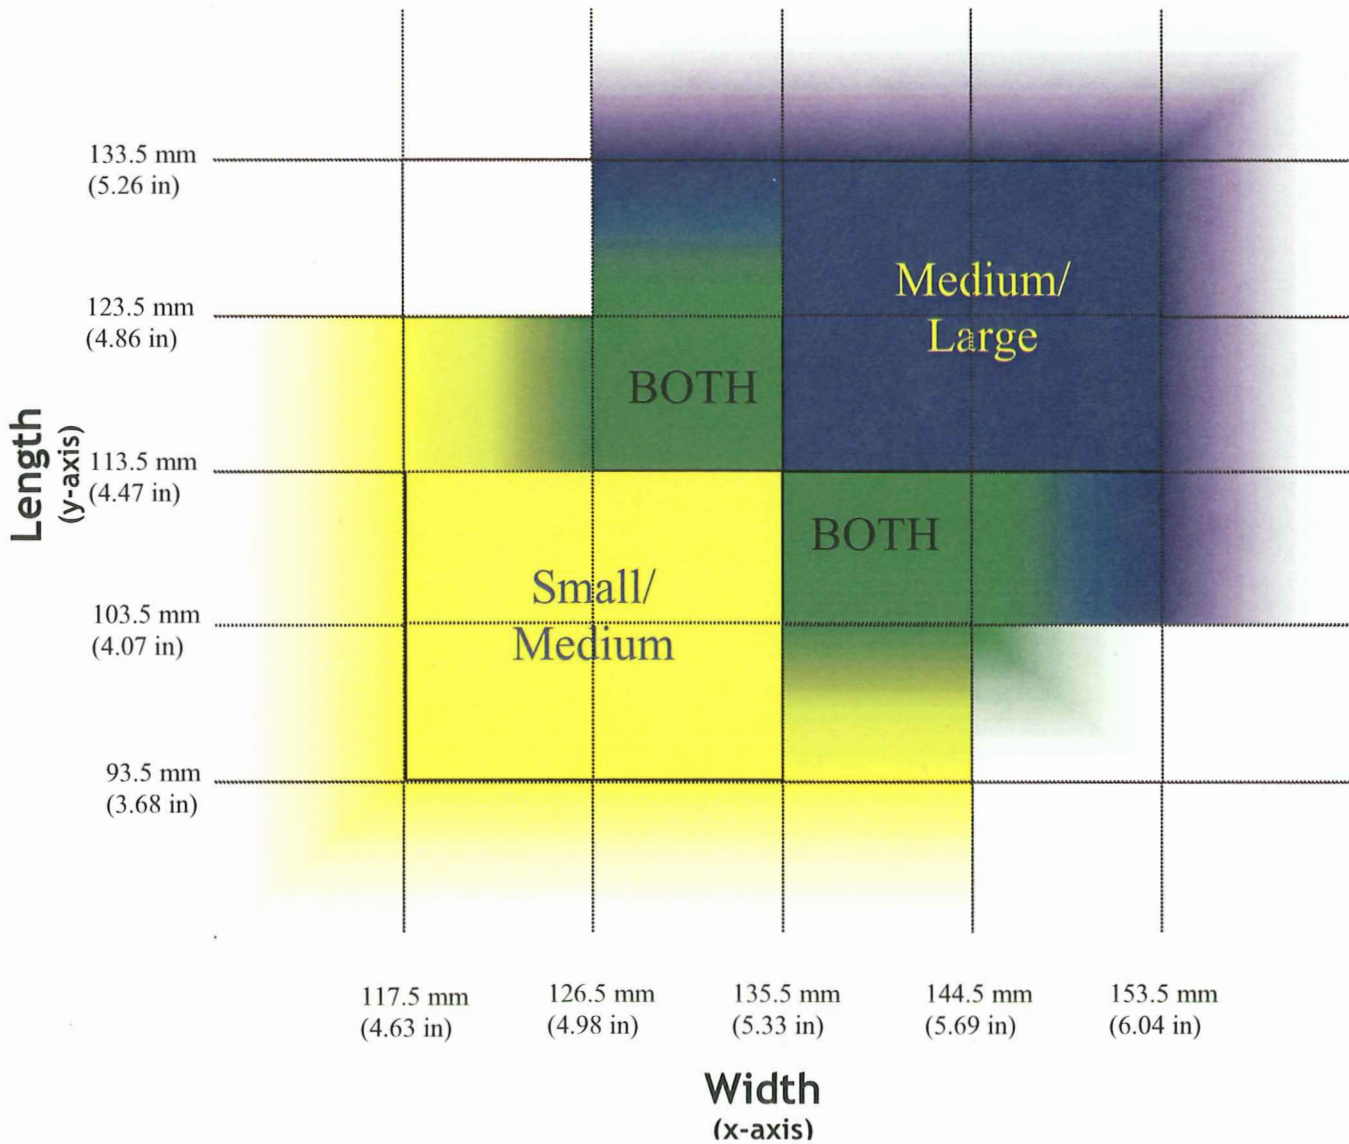



Full Face Mask Size Recommendation Chart

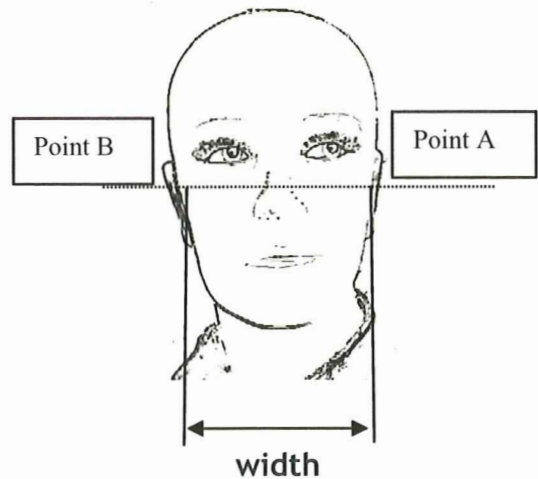

* Faded areas represent less common face measurements. It is very likely that a mask will still fit comfortably even if measurements are located in fading areas.

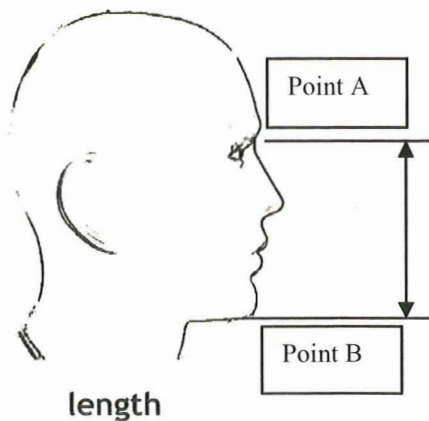

Full Face Mask Measuring Directions

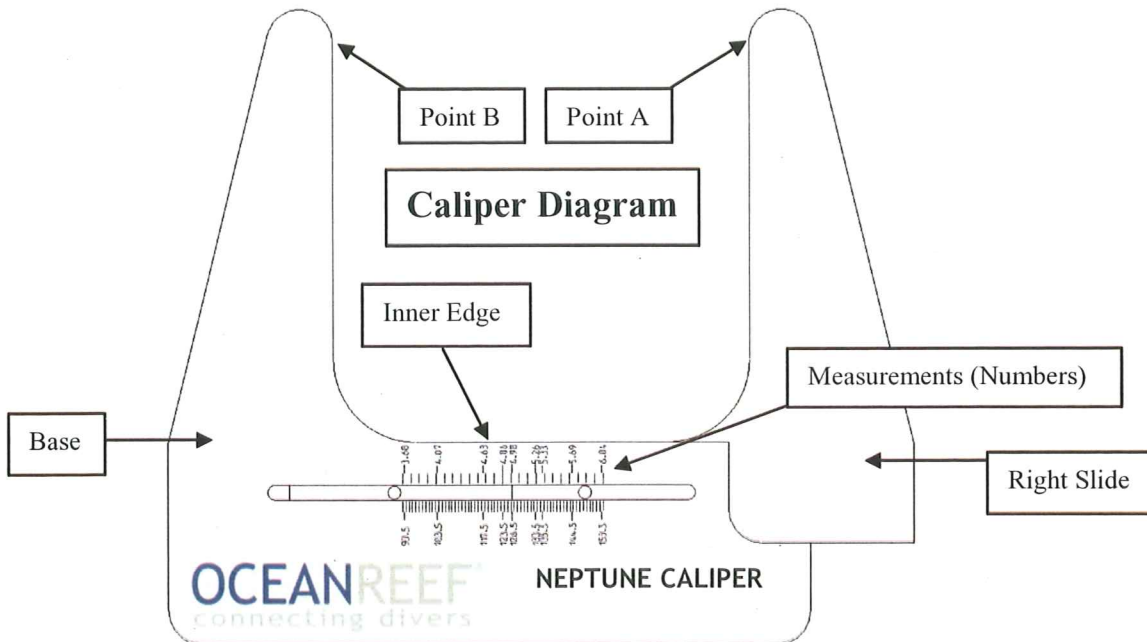

1. Adjust caliper length by moving the right slide in the opposite direction from the base
2. Take the Length measurement:
 - a. Adjust caliper so that Point A lies exactly on the bridge of the nose and Point B touches snugly underneath the tip of the chin
 - b. Remove the caliper and record the length measurement
3. Take the Width measurement:
 - a. Rest the inside edge of the caliper on the middle of the nose. Adjust the caliper so that Point A touches the outer edge of the divers left cheek bone and Point B touches the outer edge of the divers right cheek bone
 - b. Remove the caliper and record the width measurement
4. Refer to the Full Face Mask Size Recommendation.
 - a. Locate the length measurement on the y-axis. Then locate the width measurement on the x-axis
 - b. Trace the length measurement to the right, inside of the chart. Trace the width measurement up, inside the chart. Make a note of the location on the chart where the two measurements intersect
 - c. This intersection point will fall into a size category (Small/Medium; Medium/Large; or Both. Both means that the diver may wear either mask; the Small/Medium or Medium/Large)

***IF YOU HAVE QUESTIONS, CALL 1-800-922-1764**

